

APOLLO PTZ DOME TO APOLLO DVR

***** CONNECTIONS *****

DOME

YELLOW = RS486+

GREEN = RS485-

CONNECT TO APOLLO DVR USING SINGLE PAIR OF CAT5 CABLE

YELLOW (RS485+) TO GREEN SCREW TERMINAL MARKED AS "RS485 A" ON BACK OF APOLLO

GREEN (RS485-) TO GREEN SCREW TERMINAL MARKED AS "RS485 B" ON BACK OF APOLLO

SETTING UP DOME PROTOCOLS

PLEASE REFER TO PAGE 10 OF APOLLO DOME MANUAL FOR PROTOCOL AND BAUD RATE SETTINGS

RECOMMENDED IS PROTOCOL IS PELCO-D, BAUDRATE - 4800

TURN DOME ON

CONFIGURING APOLLO DVR

MENU -> SETTINGS -> PAN TILT ZOOM

CHANNEL = CHANNEL THAT PTZ DOME VIDEO CONNECTION IS ON

PROTOCOL = SHOULD MATCH DOME SETTINGS

ADDRESS = SHOULD MATCH DOME SETTINGS

BAUDRATE = SHOULD MATCH DOME SETTINGS

DATA BITS = SHOULD MATCH DOME SETTINGS (USUALLY 8)

STOP BITS = SHOULD MATCH DOME SETTINGS (USUALLY 1)

PARITY = SHOULD MATCH DOME SETTINGS (USUALLY NONE)

COPY -> PASTE -> SAVE

EXIT TO LIVE VIEW

PUT PTZ CAMERA VIDEO FEED INTO FULL SCREEN

RIGHT CLICK -> PAN/TILT/ZOOM

USE VIRTUAL JOYSTICK TO CONTROL MOVEMENT OF DOME

ENTERING DOME MENU

ON VIRTUAL JOYSTICK CLICK PAGESWITCH

TYPE 95 IN NO. BOX

CLICK PRESET

IRIS OPEN = ENTER