

## **COLOSSUS PC NETWORK SETUP**

### **AT THE COLOSSUS PC**

HAMMER AND SCREWDRIVER ICON – SYSTEM SETUP – OTHER

SETUP LOCAL IP

INPUT IP ADDRESS, SUBNET MASK AND DEFAULT GATEWAY WITHIN RANGE OF YOUR NETWORK THEN  
CLICK APPLY

UNIT MAY NEED TO RESTART

### **SETTING UP REMOTE USER**

FOLDER ICON – USER MANAGEMENT – REMOTE

USER TAB – ADD

INPUT USER NAME AND PASSWORD OF REMOTE USER AND SELECT ACCESS LEVEL

TICK THE CREATED USER

CLICK OK

### **AT THE CLIENT PC**

DOWNLOAD COLOSSUS PC CLIENT

<http://www.digitalvideos.co.uk/support/downloads/Colossus%20PC/Client67.zip>

INSTALL

USERNAME = SUPER

NO PASSWORD

CLICK HAMMER AND SCREWDRIVER ICON

GROUP SETUP

ADD GROUP

NAME GROUP

INPUT SERVER IP (IP ADDRESS OF COLOSSUS PC IF LOCAL OR REMOTE STATIC IP ADDRESS)

INPUT USERNAME AND PASSWORD OF REMOTE USER AS SETUP PREVIOUSLY ABOVE

CLICK CONNECT

OPEN PREVIEW

CLICK CAMERA NUMBER AND VIDEO STREAM WILLK APPEAR