

## HERCULES NETWORK SETUP - LOCAL

### **ON HERCULES DVR**

SETTINGS -> NETWORK ->

INPUT A SERVER NAME IN THE SERVER ID SECTION (CASE SENSITIVE)

CREATE IP, SUBNET MASK AND DEFAULT GATEWAY ALL WITHIN RANGE OF NETWORK

APPLY CHANGES, EXIT, UNIT WILL NEED TO REBOOT.

### **ON CLIENT SOFTWARE**

SETTINGS -> SERVERLIST MANAGEMENT

INPUT SAME SERVER NAME AS USED FOR DVR, TAB TO THE NEXT SECTION AND INPUT IP ADDRESS OF UNIT OR STATIC IP IF CONNECTING REMOTELY.

TAB TO NEXT SECTION AND INSERT LOCAL PORT NUMBER (NORMALLY 8100)

EXIT OUT OF SERVERLIST MANAGEMENT

CLICK "CONNECT SERVER "

INSERT SERVER NAME

INSERT USER ID (SAME AS USER ID ON DVR) AND USER PASSWORD (SAME AS USER PASSWORD ON DVR)