

BIG BRAT

AUTOPOP UP OF CAMERA ON ALARM

LIVE VIEW – SWITCH FROM CAMERA TO SENSOR AND TICK AUTOPOP UP

SERVER CONFIG – CAMERA RULES – NEW RULE

RULE NAME

EXPAND SENSOR AND TICK ALARM INPUT

NEXT

TICK CAMERA THAT U WANT TO POP UP AND PUT A LATCH TIME IN (DEFAULT=5)

NEXT

LEAVE ALARM OUT UNTICKED IF NOT TRIGGERING ANY ALARMS

APPLY AND CLOSE

RESTART DVROS

PTZ CONFIG

SERVERCONFIG – MACHINES & DEVICES

EXPAND CAMERAS

SELECT CAMER THAT HAS PTZ, RIGHT HAND SIDE YOU WILL SEE PTZ CONFIGS, MAKE SURE PTZ IS SET TO COM PORT 1, AND CHOOSE RELEVANT BUAD RATE AND PROTOCOL.

APPLY AND CLOSE

RESTART DVROS

SHOULD BE ABLE TO CONTROL THE CAMERA THROUGH THE PTZ CONTROLS ON SCREEN

USERS AND PERMISSION

SERVERCONFIG – MACHINES & DEVICES

USER PERMISSIONS

THIS IS WHERE YOU SET UP USERS AND PERMISSIONS