



## G3 Lite Speed Dome Quick Start Guide Settings Presets

This guide explains the procedure for setting presets on the G3 Lite Speed Dome.

### **Step 1.**

Call 'Preset 95' from the cameras keyboard. You will be presented with the main menu within the on screen display (OSD).

### **Step 2.**

Using the controllers joystick, move the cursor to '*Function Setting*' and move the joystick right to select. (Fig. 1)

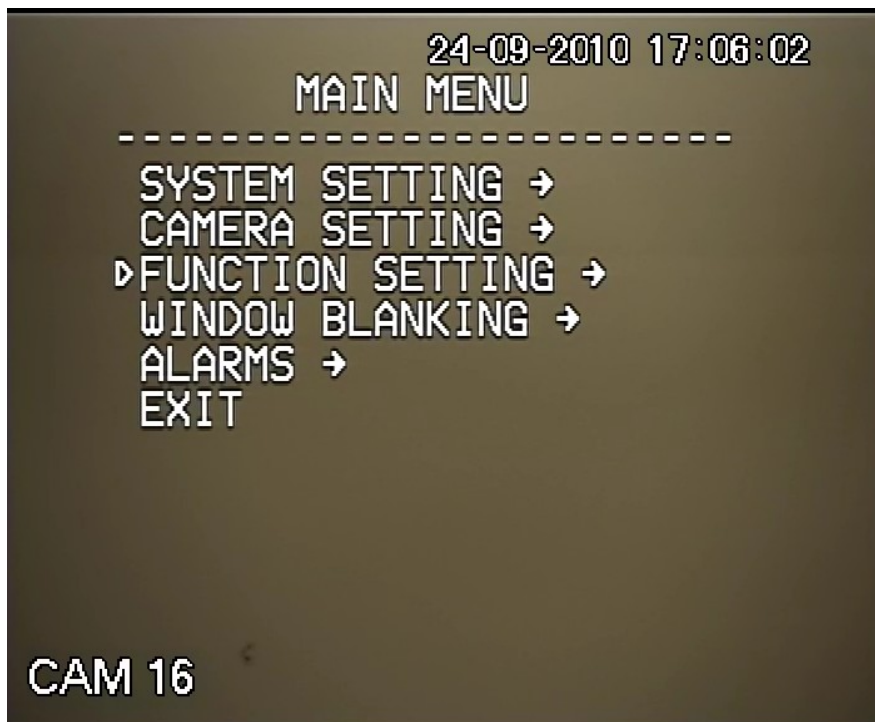


Fig. 1

**Step 3.**

Move the cursor to the 'Presets' option. (Fig.2)

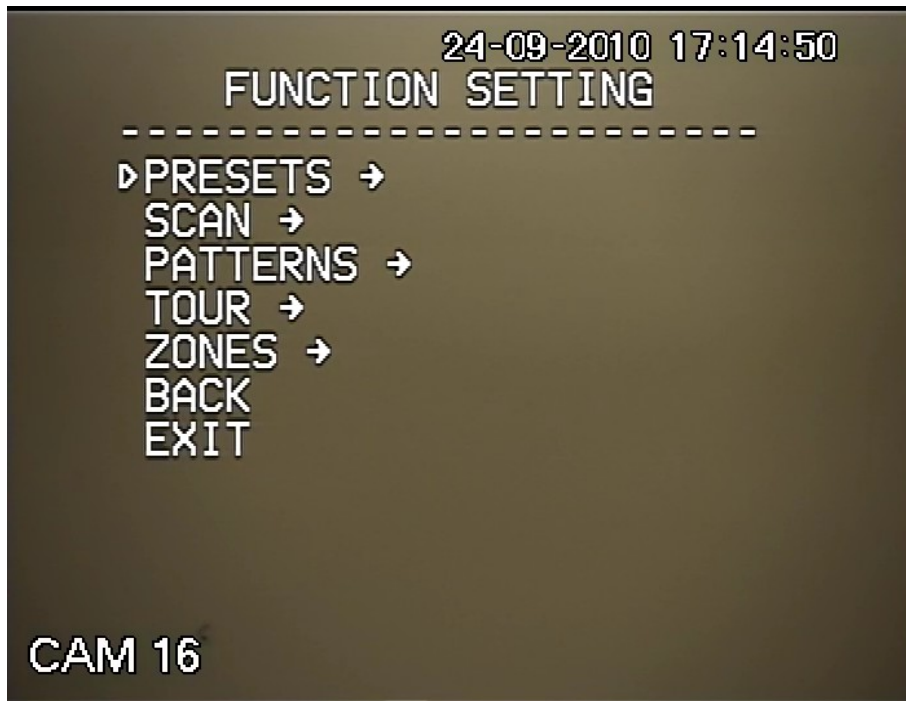


Fig. 2

**Step 4.**

Move the cursor to the 'Preset Number' position and select. Arrow will move to the preset number. (Fig. 3). Use the up and down arrow to choose the desired preset number. Once chosen, move the joystick to the right to confirm.

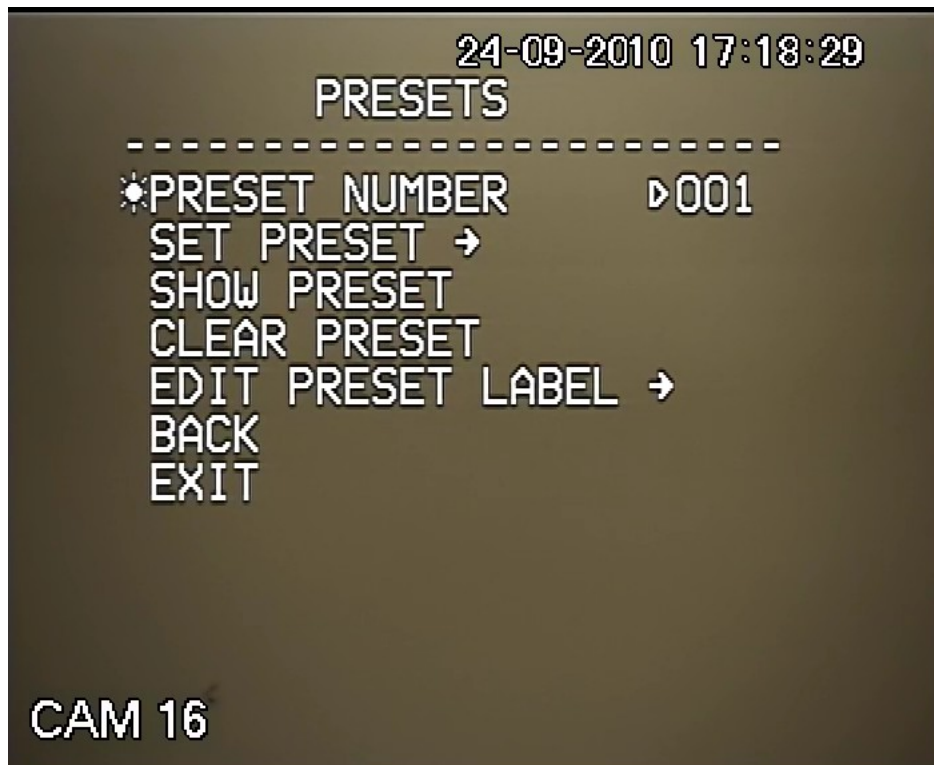


Fig. 3

**Step 5.**

Move the cursor to the 'Set Preset' position and select. (Fig. 4)

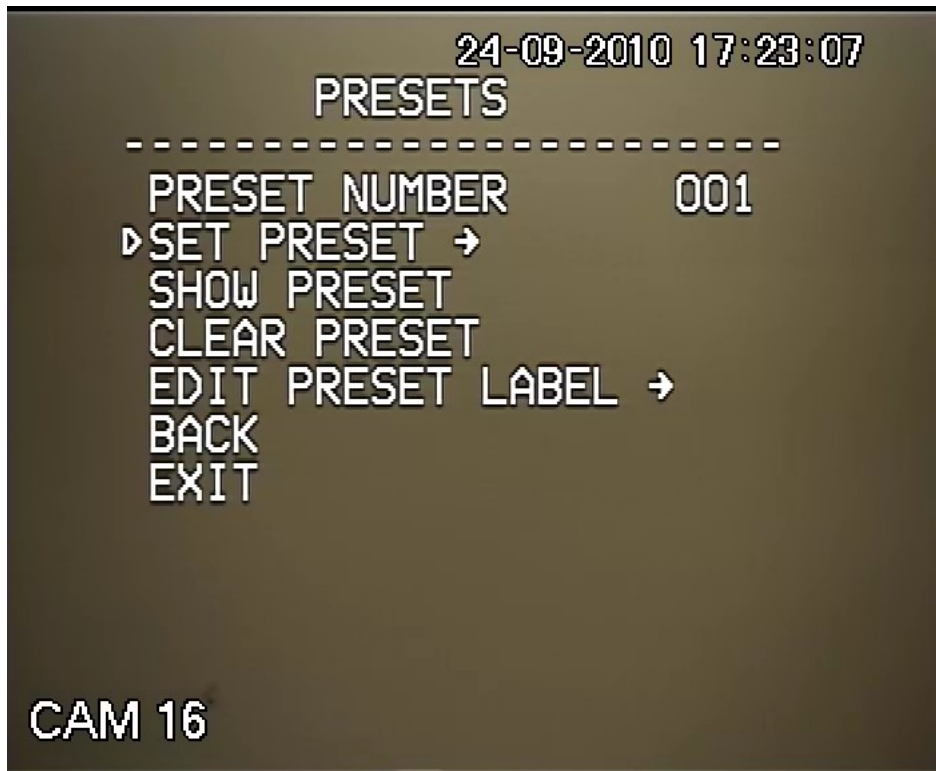


Fig. 4

**Step 6.**

The OSD will disappear. Pan, Tilt and Zoom the camera to the desired position for that preset. Select 'Iris Open' on the joystick or controller (Fig. 5)

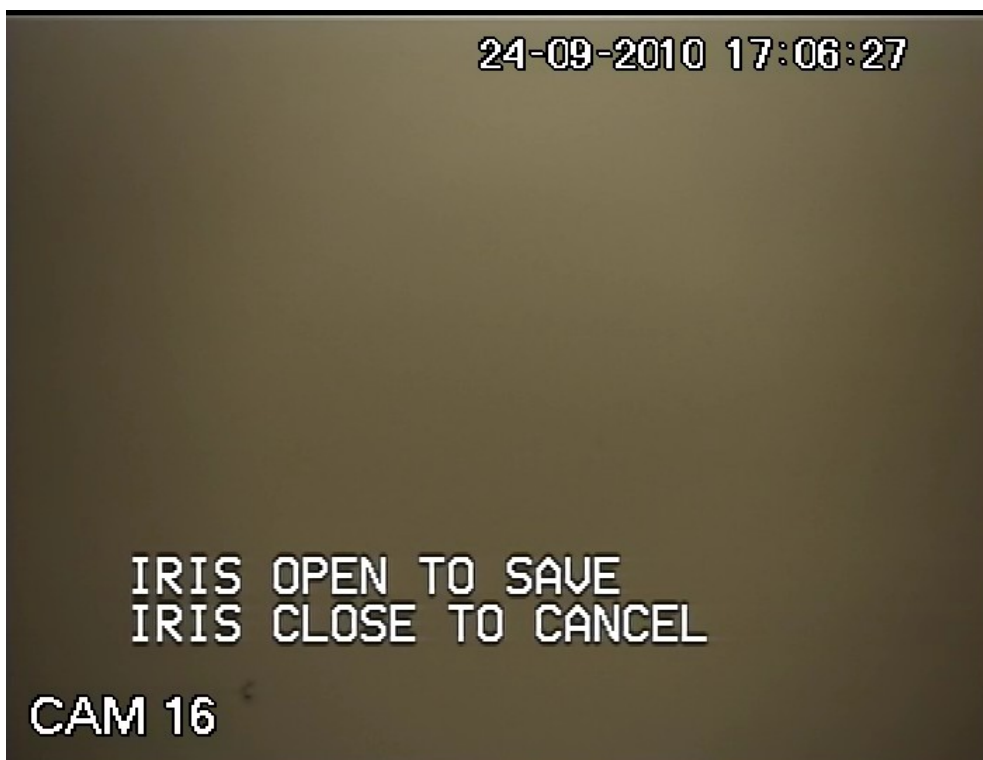
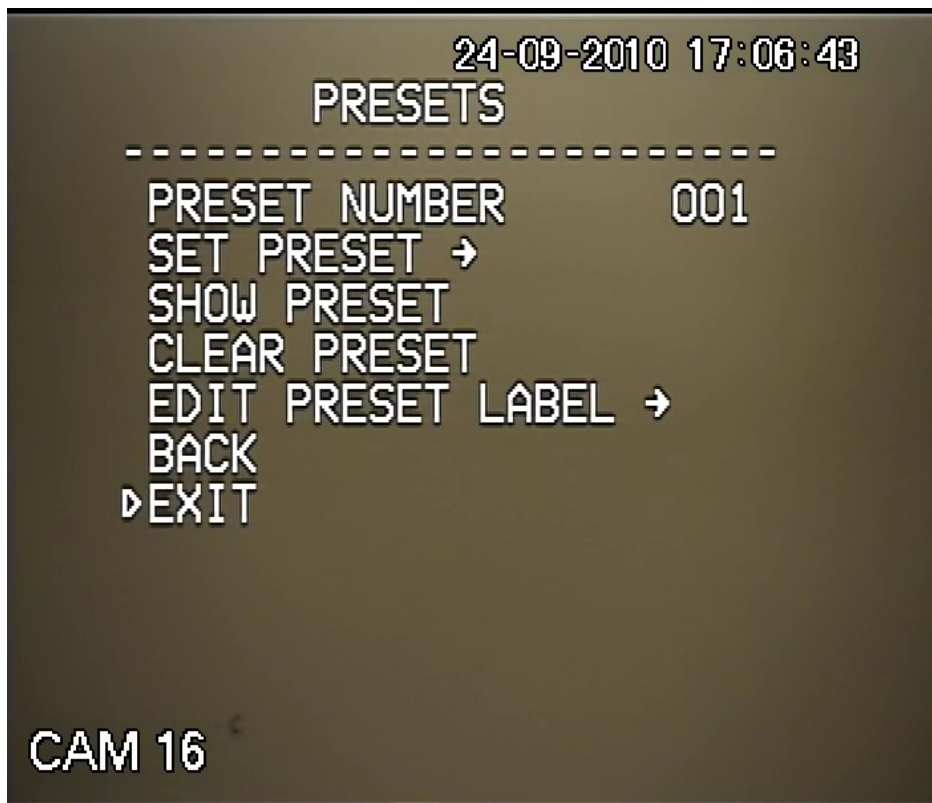


Fig. 5

**Step 7.**

The OSD will re-appear. The preset is now set. Move the cursor to 'Exit' to finish. (Fig. 6)



*Fig. 6*